
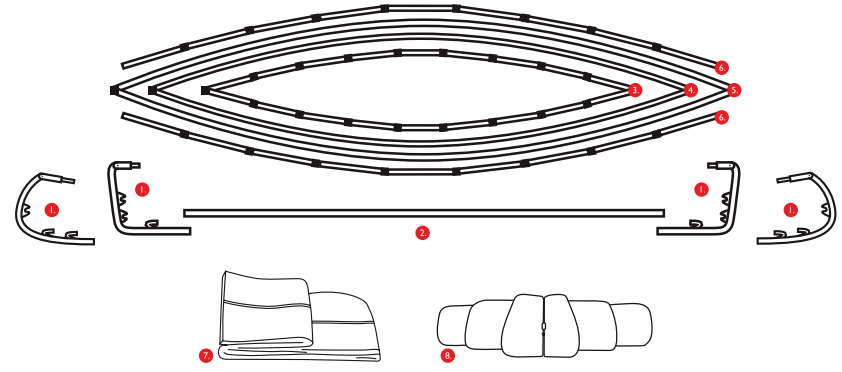


	15' Standard	16' Standard	16,5' Standard	18' Standard
1	1607	1702	1607	1607
2	1608	1703	1608	1608
3	1609	1704	1609	1609
4	1613	1705	1610	1610
5	1612	1720	1613	1812
6	1608	1703	1612	1610
7	1607	1702	1608	1612
8			1607	1608
9				1607


	13,7' Standard	15,5' Standard	17' Standard	18,5' Standard
1	185070	185070	185070	185070
2	185081	185081	185081	185081
3	185306	185093	185093	185093
4	185307	185100	185100	185100
5	185081	185091	185101	185110
6	185070	185083	185091	185100
7		185070	185083	185091
8			185070	185083
9				185070

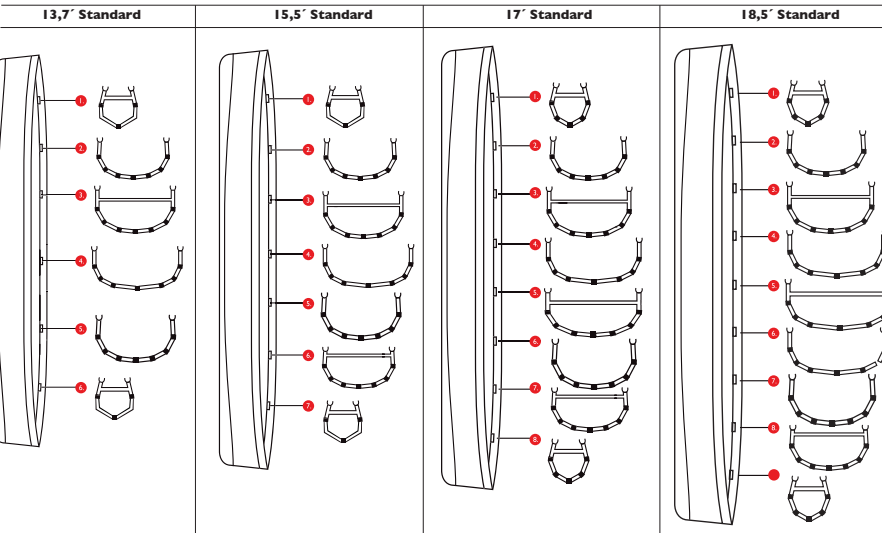

	15' Standard	16' Standard	16,5' Standard	18' Standard	13,7' Standard	15,5' Standard	17' Standard	18,5' Standard	
1	1602	1706	1602	1602	185500	185500	185700	185900	
2	1503 3325mm	1701 3560mm	1603 3655mm	1803 3760mm	185301 3186mm	185501 3786mm	185701 4216mm	185801 4653mm	
3	1506 3745mm	1709 4330mm	1606 4184mm	1806 4685mm	185302 3530mm	185502 4130mm	185702 4560mm	185802 4984mm	
4	1505 4359mm	1718 4960mm	1605 4798mm	1805 5299mm	185303 4041mm	185503 4641mm	185703 5074mm	185803 5504mm	
5	1504 4631mm	1717 4930mm	1604 5078mm	1804 5571mm	185304 4112mm	185504 4712mm	185704 5142mm	185804 5572mm	
6	1501 3927mm	1708 4410mm	1601 4376mm	1801 4867mm	185305 3736mm	185505 4336mm	185705 4766mm	185805 5196mm	
7	Reinforced skin	Green 1518	Red 1719	1620	1820	185308	185520	185720	185820
8	Foam mat	1517	1707	1619	1819	18510	185510	185710	185810

INSTALLATION OF SPRAYCOVER


The spraycover kit consists of the following parts:
 Spraycover
 Skirts
 Lid
 Attach-loops
 Bungee cord
 Resin

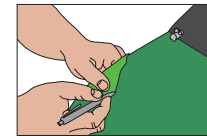


1. Pull the spraycover over your Aly canoe. Start at the bow and with a pen mark off the area where you want to bond on the first attach-loop, approximately 15 cm (6") below the rim.




2. Mark off the bonding area for the next attach loop, approximately 19 cm (7.5") below the rim and midway between hooks 1 and 2 on the spraycover.

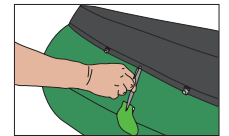

3. The remainder of the attach-loops should all be positioned midway between successive hooks. However, make sure that the attach-loops, where you will later thread the bungee cord through, all are located just above the waterline. Work your way around and finish like you started on the other side.

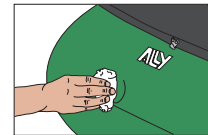

4. To enhance the bond, wash both the marked canoe skin bond area and the attach-loop bond area with acetone. A simple cotton cloth may be used.

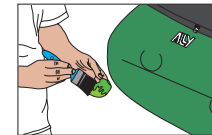

5. Aly resin should be applied with a brush to both bonding areas. Concentrate on one attach-loop and its mating skin bond area at a time. Bond on each attach-loop when the applied resin starts to take on a lighter color shade.



6. Thread the bungee cord through the attach loops and secure the two ends by tying them together. You can now hook the spraycover on to the bungee cord all the way around.



7. The cap and skirt is installed through the spraycover channel.